

TAKSTAR® 得胜

DA10 (GEN2) 翻页版 Clicker Version

演讲麦

SPEECH MICROPHONE



使用手册 User Manual

■ 前言

尊敬的用户：

感谢您选购得胜DA10 (GEN2) 翻页版演讲麦,为了您能够更好地了解使用本产品,建议您在使用前仔细阅读本说明书。

若存在有疑问或者您有宝贵的建议,可通过拨打得胜官方服务热线400 6828 333或微信扫描二维码关注得胜官方公众号与我们联系。



■ 产品特性

- 多功能演讲麦,集扩音、翻页笔于一体的手持式扩音器;
- 选用全音域喇叭,高保真音质、声音大、峰值功率15W;
- 高清显示屏,实时电量、音量等关键信息一目了然;
- 支持倒计时提示,精准掌控节奏,时间管理更高效;
- 多种音效模式,喊话、K歌一键快速切换,操作简单;
- 具备无线播放功能,简化线材连接,畅享音乐更方便自由;
- 内置DSP啸叫抑制芯片,有效抑制啸叫声;
- 超长待机,节能省电,停止使用15分钟后自动关机;
- 内置2600mAh大容量锂电池,约10小时持久续航;
- 小巧轻便,握感舒适,适合长时间手持扩音演讲。

■ 适用范围

适用于演讲、教学、宣传、K歌等场合

DA10 (GEN2) 翻页版 演讲麦

■ 产品配置

DA10 (GEN2) 演讲麦 翻页版.....	1个
Type-C充电线.....	1条
翻页接收器.....	1个
防风棉.....	1个
挂绳.....	1条
说明书.....	1份

■ 技术参数

主机参数


- 频率响应: 150Hz-12kHz
- 峰值功率: 15W
- 扬声器阻抗: 4Ω
- 主芯片: DSP
- 无线连接版本: 5.3
- 混响模式: Reverb
- 工作电压: 3.4V-4.2V
- 电池类型: 锂离子电池
- 电池容量: 3.7V/2600mAh
- 充电方式: 5V \equiv 2A
- 充电时间: 约3小时
- 总谐波失真: THD \leq 5% 1kHz@4R, 4W
- 信噪比: 80dB (A-Weighted) @1W 4Ω
- 使用时间: 约10小时
- 产品重量: 约227g
- 产品尺寸: Φ 70mm*225mm (直径*高)

音头参数

- 拾音器: 背极式驻极体
- 指向性: 超心型
- 频率响应: 60Hz-16kHz
- 灵敏度: -40 ± 2 dB (0dB=1V/Pa, at 1kHz)

注: 以上数据由得胜实验室测试得到, 并拥有最终解释权!

■ 功能示意

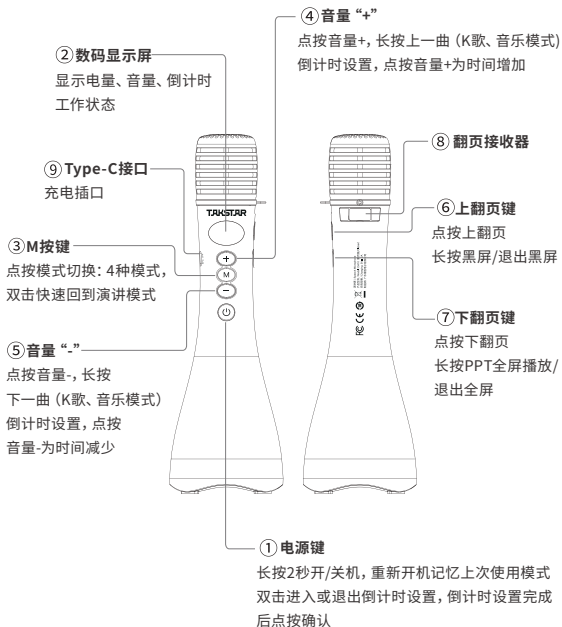

- ① 电源键：长按电源键2秒开机或关机。双击进入倒计时设置或退出并伴有提示音。在任意工作模式下，无使用15分钟后自动关机。带记忆功能，重新开机默认上次使用模式。
- ② 数码显示屏：显示当前电池电量百分比、工作状态、倒计时、音量等信息。屏幕显示“--”表示产品处于正常工作状态，点按电源按键唤醒。低电量提醒：电量不足10%时，电池符号闪烁。
- ③ M模式切换键：点按循环切换4种工作模式：演讲模式（出厂默认）、主持模式、K歌模式、音乐模式，伴随对应语音提示。双击快速回到演讲模式。K歌、音乐模式下，长按控制音乐暂停/继续。
- ④ 音量+键：点按增加音量，有“00-05”共6级音量调节；在K歌、音乐模式下，长按切换上一曲。
- ⑤ 音量-键：点按减小音量，有“00-05”共6级音量调节；在K歌、音乐模式下，长按切换下一曲。
- ⑥ 上翻页键：点按上翻页；PPT全屏状态长按黑屏/退出黑屏。
- ⑦ 下翻页键：点按下翻页；长按PPT全屏播放/退出全屏。
- ⑧ 翻页接收器：插入电脑USB接口进行翻页功能操作。
- ⑨ Type-C充电口：通过连接Type-C充电线为演讲麦充电。

■ 使用说明

一、无线连接配对方法

首次使用无线连接功能时，需要与手机或其他智能设备配对连接，操作步骤如下：

1. 开机后点按M键切换到K歌或音乐模式，进入搜索配对，屏幕显示“BL”闪烁；


DA10 (GEN2) 翻页版 演讲麦

2. 打开手机的无线连接功能，搜索“TAKSTAR DA10”并点击连接，成功后伴有提示音；
3. 下次开机后，如果是已进行过无线连接，将自动回连最后一次使用的设备。
4. 按住-键，再点按M键可断开无线连接。

注：K歌模式和音乐模式均可无线配对，其他模式不能配对。

二、翻页功能使用

1. 将翻页接收器从演讲麦一侧取出；
2. 插入电脑的USB接口，即可进行翻页。

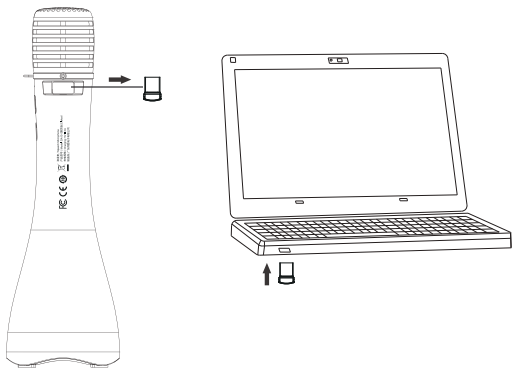

三、倒计时设置提醒


设置总时长：

1. 双击电源键进入倒计时模式，显示屏数字闪烁，同时语音播报“倒计时设置”；
2. 此时按音量按键设置总时长（0-180分钟范围，5分钟一档）；
3. 设置完成后点按电源键确认，会有语音提示“倒计时设置成功”。
4. 倒计时功能开始后，如需要退出倒计时，可再次双击电源按键退出。
5. 距离倒计时结束最后5分钟，每分钟提示一次，倒计时结束时，连续提示5次。

四、充电与电量指示

状态	屏幕显示
开机状态	充电中：⚡符号会闪烁，CH符号常亮
	充满电：⚡符号常亮，电量显示100%
关机状态	充电中：⚡符号闪烁
	充满电：⚡符号常亮

五、握持示意图

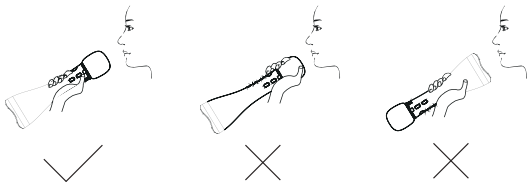

握持示意图

■ 安全警示

为避免电击、高温、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失,使用本产品前,请仔细阅读并遵守以下事项:

1. 使用产品时请确认所连设备与本产品是否匹配以及合理调整音量大小,不要在超过产品功率及大音量下长时间使用,以免造成产品异常;
2. 使用中若发现有异常(如冒烟、异味等),请立即关闭电源开关并拔掉电源插头,然后将产品送售后服务网点检修;
3. 消费者若使用电源适配器供电,则应购买配套使用获得CCC认证并满足标准要求的电源适配器;
4. 本产品及配件都应放置在室内干燥通风处,请勿长期存放在潮湿、灰尘多的环境,使用中避免靠近火源、雨淋、进水、过度碰撞、抛掷、振动本机及覆盖通风孔,以免损坏其功能;
5. 若产品需要固定于墙壁或天花板时,请确保固定到位,防止因固定强度不足导致产品发生跌落危险;
6. 使用该产品时需遵守相关安全规定,法律法规明确禁止使用场合请勿使用本产品,以免导致意外事故;
7. 请不要自行拆机改装或维修,以防止出现人身伤害,如有问题或服务需求请联系当地售后服务网点跟进处理。

■ 关于图标含义解释



根据RL2004/108/EG和European Low Voltage Directive (欧洲低电压指令) RL2006/95/EG的测试结果表明,本产品符合欧共同体关于电磁兼容性的成员国法律整合的指令中所规定的限值。



未经合规方明确批准的变更或修改可能会使用户失去操作设备的权限。此设备符合FCC规则第15条部分的要求。操作须符合以下两个条件:(1) 此设备可能不会造成有害干扰;(2) 此设备必须接受接收到的任何干扰,包括可能导致意外操作的干扰。



此符号表示,根据WEEE指令(2012/19/EU)和国家法律,由于这种类型的废弃物会有潜在的有害物质,可能对环境 and 人类健康产生负面影响,所以本产品不应与您的家庭垃圾一起处置,应将本产品交由授权的电气和电子设备(WEEE)回收站回收。同时,您在正确处理本产品的同时将有助于自然资源的有效利用。如需了解更多有关您可以在何处放置废物回收设备的信息,请联系您当地的城市办事处、废物管理局或家庭废物处理服务部门。

■ 关于本说明书

本说明书中内容符合截止印刷之日的技术规格。由于得胜公司会不断改进产品，本说明书可能不符合您的特定产品的技术规格。要获取最新版说明书，请访问得胜官网，然后下载说明书文件。技术规格、设备或另售的附件在各个地区可能有所不同，如有问题请与当地得胜销售网点确认。如需更多支持和深层产品信息，请浏览得胜官方网站：<https://www.takstar.com>

版权所有 ©2025 得胜。得胜、TAKSTAR及其各自标志是得胜公司在中国和/或其他国家/地区的注册商标或商标。所有其它商标均是其各自所有者的财产。

■ 环保说明

产品中有害物质或元素名称及含量标识表

部件名称	有害物质或元素									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸 二正丁酯 (DBP)	邻苯二甲酸 二异丁酯 (DIBP)	邻苯二甲酸 丁基苯酯 (BBP)	邻苯二甲酸 二(2-乙基)己酯 (DEHP)
塑料部件	○	○	○	○	○	○	○	○	○	○
金属部件	×	○	○	○	○	○	○	○	○	○
电路板组件	×	○	○	○	○	○	○	○	○	○
线缆	×	○	○	○	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

此标志为产品的环保使用期限标志，且此环保使用期限只适用于产品正常工作温度和湿度等条件。



■ Preface

Dear Customer,

Thanks for purchasing our product. Read this manual thoroughly to use the product properly.

If you have any questions or suggestions, please contact our local sales service.

■ Features

- Handheld speech mic that serves as both a voice amplifier and presentation clicker.
- With full-range speaker to deliver clear audio with 15W peak power.
- High-definition screen shows battery status and volume at a glance.
- Supports countdown prompts for precise rhythm control and more efficient time management.
- Multiple sound effect modes, toggle between speech and karaoke easily.
- Wireless playback to enjoy music without messy cables.
- Built-in DSP effectively minimizes unwanted feedback noise.
- Automatic power-off after 15 minutes of inactivity.
- Built-in 2600mAh battery lasts about 10 hours on a single charge.
- Compact and comfortable to hold, ideal for extended use.

■ Applications

For speeches, teaching, promotions, and karaoke.

■ Package Contents

- 1 × Microphone
- 1 × USB-C Charging Cable
- 1 × Presentation Receiver
- 1 × Windscreen
- 1 × Lanyard
- 1 × User Manual

■ Specifications

Speech Microphone

- Frequency Response: 150Hz-12kHz
- Peak Power: 15W
- Speaker Impedance: 4Ω
- Main Chip: DSP
- Wireless Connection Version: V5.3
- Reverb Mode: Reverb
- Operating Voltage: 3.4V-4.2V
- Battery Type: Lithium-ion
- Battery Capacity: 3.7V/2600mAh
- Charging Method: 5V=2A
- Charging Time: Approx. 3 hours
- THD: ≤ 5% 1kHz@4R, 4W
- SNR: 80dB (A-Weighted) @1W 4Ω
- Usage Time: Approx. 10 hours
- Product Weight: Approx. 227g
- Product Dimensions: Ø70mm*225mm (Dia.*Height)


DA10 (Clicker Version) Speech Microphone

Microphone Capsule

- Transducer: Back electret condenser
- Polar Pattern: Supercardioid
- Frequency Response: 60Hz-16kHz
- Sensitivity: $-40 \pm 2\text{dB}$ (0dB=1V/Pa, at 1kHz)

Note: The above data are measured by Takstar laboratory which has the final interpretation right!

Function Descriptions

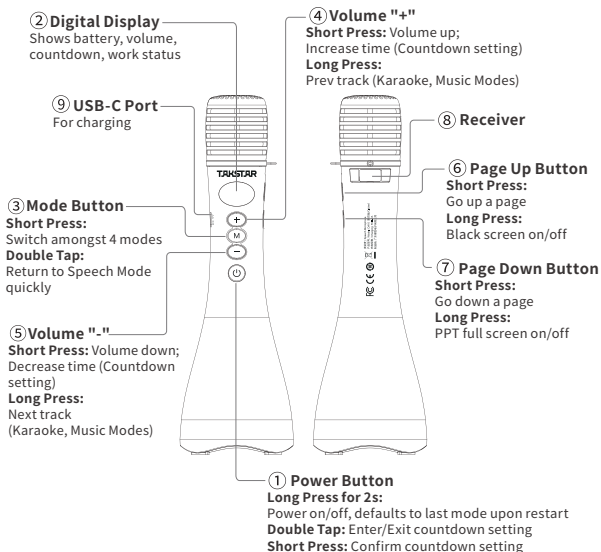

DA10 (Clicker Version) Speech Microphone

- ① Power Button: Long press for 2 seconds to turn on or off. Double click to enter/exit countdown settings, with corresponding voice prompts. Auto power-off after 15 minutes of inactivity. Remembers the last used mode upon restart.
- ② Digital Display: Shows current battery percentage, working status, countdown, volume, etc. Displaying "--" indicates normal operation; Press the power button to wake the display. Low power alert: if remaining battery less than 10%, battery icon flashes.
- ③ Mode Switch Button: Tap to cycle through 4 modes: Speech Mode (factory default), Host Mode, Karaoke Mode, and Music Mode, with corresponding voice prompts. Double tap to quickly return to Speech Mode. Long press to pause/resume music in Karaoke and Music modes.
- ④ Volume Up Button: Tap to increase volume (6 levels: 00-05). Long press to skip to the previous track in Karaoke and Music modes.
- ⑤ Volume Down Button: Tap to decrease volume (6 levels: 00-05). Long press to skip to the next track in Karaoke and Music modes.
- ⑥ Page Up Button: Tap to go to the previous page; long press in PPT full-screen mode to enter or exit black screen.
- ⑦ Page Down Button: Tap to go to the next page; long press for full-screen PPT playback or to exit full-screen.

- ⑧ Presentation Receiver: Insert into a computer's USB port for slide clicker functionality.
- ⑨ USB-C Charging Port: Connect a USB-C charging cable to charge the device.

■ Operating Instructions

A. Wireless Connection Pairing


To use the wireless connection feature for the first time, pair it with your phone or other smart devices as follows:

1. After powering on, press the "M" button to switch to Karaoke or Music mode, entering search pairing mode; the screen will display a flashing "BL".
2. Enable the wireless connection on your phone, search for "TAKSTAR DA10" , and tap to connect. A prompt sound will indicate success.
3. On subsequent power-ups, if a wireless connection has been made before, it will automatically reconnect to the last used device.
4. Press and hold the "-" button, then tap the "M" button to disconnect the wireless connection.

Note: Wireless pairing is available only in Karaoke and Music modes.

B. Presentation Clicker Function

1. Remove the receiver from the side of the mic.
2. Insert it into the USB port of your computer to use the clicker feature.

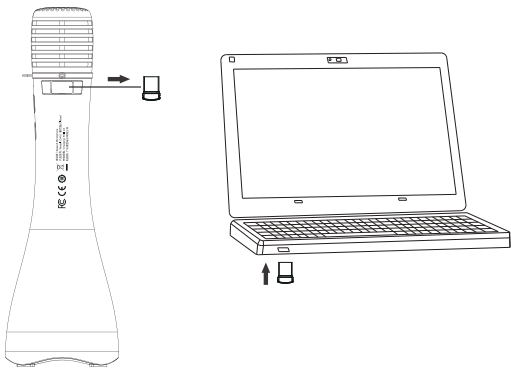

C. Countdown Settings

1. Double-click the power button to enter countdown mode; the display will flash, and a voice will announce "Countdown Setting".
2. Use the volume buttons to set the total duration (0-180 minutes, in 5-minute increments).


DA10 (Clicker Version) Speech Microphone

3. After setting, press the power button to confirm, there will be a voice prompt "Countdown setting is successful".
4. To exit the countdown function after it starts, double-click the power button again.
5. For the last 5 minutes of the countdown, it vibrates once every minute, and upon completion, it vibrates 5 times in succession.

D. Charging and Battery Indication

State	Screen Display
Power On State	Charging: Symbol ⚡ flashes, CH symbol stays solid.
	Fully Charged: Symbol ⚡ stays solid and battery level shows 100%.
Power Off State	Charging: Symbol ⚡ flashes.
	Fully Charged: Symbol ⚡ stays solid.

E. Grip Diagram

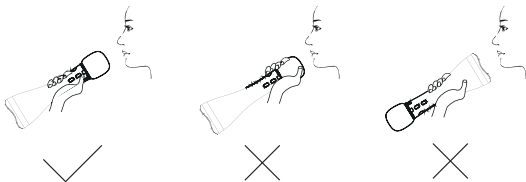


Grip Diagram


■ Safety Instructions

To avoid electric shock, overheat, fire, radiation, explosion, mechanical risk and injury or property loss due to improper use, please read and observe the following items before use:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high-volume level for extended time to avoid product malfunction.
2. If there is any abnormality during use (e.g., smoke, strange odor), please kill the power switch and unplug from power source, then send the product to the local after-sales service for repair.
3. Power adapter used, if any, should be approved by CCC certification or similar standards and comply with the power supply requirements.
4. Keep this product and its accessories in a dry and ventilated area. Do not store in a humid or dusty area for extended time. Keep away from fire, rain, liquid intrusion, bumping, throwing, vibrating, or from blocking any ventilation openings, to prevent malfunction.
5. The product must, when installed on walls or ceilings, be fixed firmly in place at adequate strength to prevent from falling.
6. Please abide by safety rules during operation. Do not use the product in places prohibited by laws or regulations to avoid accident.
7. Do not disassemble or repair the product unauthorized to avoid injury. If you have any questions or require any services, please contact our local after-sales service.

■ Label Meanings

 This device is compliant with the limits of the European Council Directive on the approximation of the laws of the member states relating to electromagnetic compatibility according to RL2004/108/EG and European Low Voltage Directive RL2006/95/EG.

 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the complying party may cause the user to lose permission to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.



This symbol indicates that this product should not be disposed of with your household waste, according to the WEEE directive (2012/19/EU) and your national law. This  product should be handed over to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with WEEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, or your household waste disposal service.

■ About This Manual

This manual contains up-to-date technical specifications as of printing. However, specifications contained herein may not conform to your particular product since Takstar is constantly improving its products. Also, specifications, devices or accessories available may vary from region to region. If you have any questions, please contact our local sales outlet. For the latest version/more information, please visit our website: <https://www.takstar.com/>

Copyright ©2025 TAKSTAR. TAKSTAR, 得胜 and their respective logos are registered trademarks or trademarks of Takstar company in the PRC, and/or other countries. All other trademarks are the property of their respective owners.

注意事项:

1. 本单为保修凭证, 请用户妥善保管, 如有遗失, 恕不保修或退换。
2. 保修期限制: 购买之日起十二个月内。
3. 除了不可抗力事件损坏外, 由本公司负责, 免费维修。
4. 如属保管不善或使用不当造成的损坏, 维修点将酌情收费。
5. 擅自拆卸维修者, 不予保修。
6. 以上保修条款仅限于中国市场适用 (不含港澳台地区)。

产品服务保证书

姓名: _____ 电话: _____ 地址: _____

商品: _____ 型号: _____ 购买日期: _____ 年 _____ 月 _____ 日

维修记录栏 (由维修员填写)	维修员签名	日期

◆广东得胜电子有限公司 ◆电话: 400-6828-333 ◆地址: 广东省惠州市博罗县龙溪街道富康一路2号



扫一扫，了解更多产品
Scan for more
product information

**广东省电声工程技术研究开发中心
广东得胜电子有限公司制造**

地址：广东省惠州市博罗县龙溪街道富康一路2号
服务热线：400 6828 333 传真：0752-6383950
邮箱：xs@takstar.com
网址：www.takstar.com

Guangdong Takstar Electronic Co., Ltd.
Address: No. 2 Fu Kang Yi Rd., Longxi Boluo
Huizhou, Guangdong 516121 China
Tel: 86 752 6383644 Fax: 86 752 6383952
Email: sales@takstar.com
Website: www.takstar.com