

## 尊敬的用户:

感谢您选购得胜E270S扩音器,为了您能够更好的了解使用本产品,建议您在使用前仔细阅读本说明书。

若存在有疑问或者您有宝贵的建议,可通过拨打得胜官方服务热线400 6828333或使用微信扫描二维码关注得胜官方公众号与我们联系。



## 产品特性

- 集麦克风、功放、音箱、于一体的便携式数字播放扩音器
- 选用稀土材质扬声器,重量更轻、音质更好、声音更大
- 综合应用数字电声技术,能输出高达12W的峰值功率
- 壳体采用ABS工程原料成型,坚固耐磨,硅胶按键设计,手感更佳
- 具有音乐播放功能,支持TF存储卡上的多媒体音频文件播放
- 具有无线播放功能,可连接手机、电脑、PAD等无线播放设备播放音乐
- 内置大容量耐久型锂离子电池,续航时间可达15小时
- 灵活可变的肩挎及腰挂等多种佩戴方式,满足不同用户的个性需求

## 标准配置

扩音器.....	1个	肩带.....	1条
头戴麦克风.....	1个	说明书.....	1份
充电线.....	1条	背扣.....	1个

## 适用场合


教学、导游、培训、促销、宣传、晨练、娱乐等场合

## 技术参数

- 频率响应:80Hz-12KHz
- 峰值功率:12W
- 扬声器阻抗:4Ω
- 工作电压:3.7V-4.2V
- 电池规格:3.7V/2600mA
- 充电规格:DC 5V=1A
- 充电时间:约4小时
- 使用时间:约15小时
- TF卡:支持64G及以下
- 媒体格式:MP3、WAV、WMA
- 单件重量:约250g
- 产品规格:94x101x45mm

注:以上数据由得胜实验室测试得到,并拥有最终解释权!

## 控制面板功能示意图

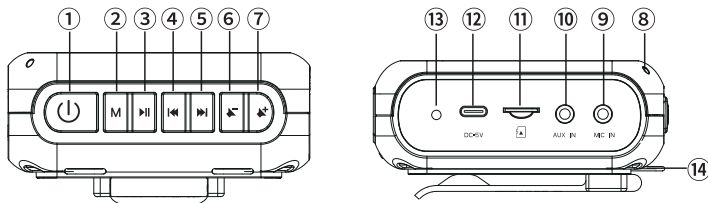

- ① 电源开关键:长按此键约3秒后电源指示灯亮,进入开机工作状态,在工作模式下长按此键约3秒,电源指示灯灭,进入关机状态
- ② M(模式)键:模式切换键,点按该按键,可切换工作模式,并且伴有相应的提示音
- ③ 播放/暂停键:控制音乐播放或暂停
- ④ 上一曲按键:无线播放、TF卡播放时,短按此键为上一曲
- ⑤ 下一曲按键:无线播放、TF卡播放时,短按此键为下一曲
- ⑥ 总音量减键:调节音乐和麦克风总音量减小
- ⑦ 总音量加键:调节音乐和麦克风总音量加大
- ⑧ 工作指示灯:开机常亮绿灯,播放音乐时绿灯慢闪,低电时红灯慢闪
- ⑨ MIC IN 输入插孔:将头戴麦克风插头插入此孔,自动进入喊话模式
- ⑩ AUX IN 输入插孔:用Ø3.5mm连接线,与手机、电脑等设备连接将扩音器作为小音箱使用
- ⑪ TF卡插口:根据示意的插卡方向插入TF内存卡,插入时,听到“嗒”一声,表示已安装到位并将其锁住;取卡时只要将卡往下按,听到“嗒”一声后轻轻松手,TF内存卡会自动弹出来  
注意:若TF卡内有其它非音频类文件可能会导致机器不能正常读取TF卡内歌曲,拷入歌曲时请先格式化
- ⑫ 充电接口:通过连接Type-C充电线为扩音器充电
- ⑬ 充电指示灯:充电时常亮红灯,充满时常亮绿灯
- ⑭ 肩挂扣:用于安装肩带,可将扩音器斜挂于肩上使用

## 使用说明

1. 长按电源键约3秒开机,点按切换键机器语音提示进入无线播放模式,此时即可配对无线播放设备播放音乐,调节音量加减键至声音为合适大小;
2. 插入TF卡,机器自动语音提示切换为TF卡模式,此时即可播放TF卡上的音乐;
3. 将音频线插入AUX IN接口,机器自动提示为外接音频输入模式,此时机器当做有源音箱使用;
4. 将头戴麦克风的Ø3.5mm插头插入MIC IN接口,即可进入喊话模式,请调节音量至合适大小,可有效避免啸叫现象;
5. 使用过程中,若工作指示灯红灯闪时表示电量低,请及时充电。

## 安全警示

为避免电击、高温、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失,使用本产品前,请仔细阅读并遵守以下事项:

1. 使用产品时请确认所连设备与本产品是否匹配以及合理调整音量大小,不要在超过产品功率及大音量下长时间使用,以免造成产品异常;
2. 使用中若发现有异常(如冒烟、异味等),请立即关闭电源开关并拔掉电源插头,然后将产品送售后服务网点检修;
3. 若产品需要使用可拆装电池时,严禁使用外壳绝缘材料破损的电池,请不要为非充电电池充电;
4. 本产品及配件都应放置在室内干燥通风处,请勿长期存放在潮湿、灰尘多的环境,使用中避免靠近火源、雨淋、进水、过度碰撞、抛掷、振动本机及覆盖通风孔,以免损坏其功能;
5. 若产品需要固定于墙壁或天花板时,请确保固定到位,防止因固定强度不足导致产品发生跌落危险;
6. 使用该产品时需遵守相关安全规定,法律法规明确禁止使用场合请勿使用本产品,以免导致意外事故;
7. 请不要自行拆机改装或维修,以防止出现人身伤害,如有问题或服务需求请联系当地售后服务网点跟进处理。

## 环保说明

产品中有毒有害物质或元素的名称及含量标识表

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
塑料部件	○	○	○	○	○	○
金属部件	×	○	○	○	○	○
电路板组件	×	○	○	○	○	○
线缆	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。  
 ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
 ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
 此标志为产品的环保使用期限标志,且此环保使用期限只适用于产品正常工作的温度和湿度等条件。

### 注意事项:

1. 本单为保修凭证,请用户妥善保管,如有遗失,恕不保修或退换。
2. 保修期限:购买之日起十二个月内。
3. 除了不可抗力事件损坏外,由本公司负责,免费维修。
4. 如属保管不善或使用不当造成的损坏,维修点将酌情收费。
5. 擅自拆卸维修者,不予保修。
6. 以上保修条款仅限于中国国内市场适用(不包含港澳台地区)。

## 产品服务保证书

姓名:\_\_\_\_\_电话:\_\_\_\_\_地址:\_\_\_\_\_

商品:\_\_\_\_\_型号:\_\_\_\_\_购买日期:\_\_\_\_\_年\_\_月\_\_日

维修记录栏(由维修员填写)	维修员签名	日期

◆ 广东得胜电子有限公司 ◆ 电话: 400-6828-333 ◆ 地址: 广东省惠州市博罗县龙溪街道富康一路2号

※本产品相关规格如有变更恕不另行通知。



Dear Customer,  
Thank you for purchasing our product. Read this manual thoroughly to use the product properly.  
If you have any questions or suggestions, please contact our local sales service.

### ■ Features

- Integrated mic, amplifier, and speaker in a portable design.
- Lightweight rare-earth driver for quality, loud sound output.
- Digital audio technology enables up to 12W peak power.
- Durable ABS housing with silicone button interface.
- Supports multimedia audio playback from TF memory card.
- Wireless connectivity for music streaming from devices.
- Long-lasting 15-hour lithium-ion battery life.
- Flexible shoulder and waist wearing methods.

### ■ Package Contents

- |                     |                    |
|---------------------|--------------------|
| 1 × Voice Amplifier | 1 × Shoulder Strap |
| 1 × Headset Mic     | 1 × User Manual    |
| 1 × Charging Cable  | 1 × Belt Clip      |

### ■ Application


Teaching, tour guiding, training, sales promotion, announcement, morning exercise, entertainment.

### ■ Specifications

- |                                  |                                   |
|----------------------------------|-----------------------------------|
| • Frequency Response: 80Hz-12kHz | • Charging Time: Approx. 4hrs     |
| • Peak Power Output: 12W         | • Usage Time: Approx. 15hrs       |
| • Speaker Impedance: 4Ω          | • TF Card Support: Up to 64GB     |
| • Operating Voltage: 3.7V-4.2V   | • Media Formats: MP3, WAV, WMA    |
| • Battery: 3.7V/2600mA           | • Net Weight: Approx. 250g        |
| • Charging: DC 5V=1A             | • Product Dimensions: 94x101x45mm |

Note: The above data are measured by Takstar laboratory which has the final interpretation right!

### ■ Control Panel Function Guide

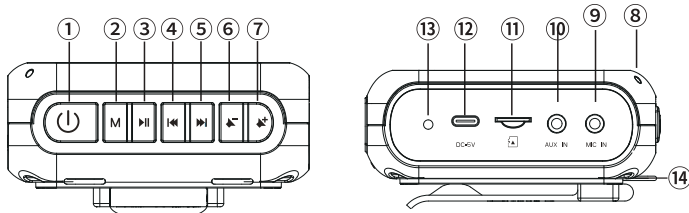

- ① Power Switch: Long press 3 sec to turn on/off (power indicator light turns on/off respectively).
- ② Mode Button: Press to cycle through operating modes, accompanied by audio prompts.
- ③ Play/Pause: Controls music playback or pause.
- ④ Previous Track: During wireless/TF playback, short press to skip to previous track.
- ⑤ Next Track: During wireless/TF playback, short press to skip to next track.
- ⑥ Volume Down: Adjusts overall volume of music and mic down.
- ⑦ Volume Up: Adjusts overall volume of music and mic up.
- ⑧ Status Light: Solid green when powered on, slow flashing green during music playback, slow flashing red when low battery.
- ⑨ MIC IN Input Jack: Plug in headset mic to enter voice amplification mode.
- ⑩ AUX IN Input Jack: Connect devices like phones or computers using a Ø3.5mm cable to use as a speaker.
- ⑪ TF Card Slot: Insert a TF memory card according to indicated orientation. Push the card in until you hear a click to lock it in place. To remove, push the card in again to eject.  
Note: Format TF card before copying music, as non-audio files may prevent proper playback.

- ⑫ Charging Port: Use a Type-C cable to charge the amplifier.
- ⑬ Charging Light: Solid red during charging, solid green when fully charged.
- ⑭ Shoulder Strap Hook: Attach strap for hands-free use.

### ■ Operating Instructions


1. Power on by long pressing the Power button 3 sec. Press Mode button to switch to wireless playback mode. Then pair a wireless device to play music and adjust volume as needed.
2. Insert a TF card to enable TF card playback mode, where you can play music from TF card.
3. Plug an audio cable into AUX IN to use the amplifier as a powered speaker.
4. Connect a headset mic to MIC IN for voice amplification. Adjust volume to appropriate level to avoid feedback.
5. If the status light flashes red (low battery), charge the device promptly.

### ■ Safety Instructions

To avoid electric shock, overheat, fire, radiation, explosion, mechanical risk and injury or property loss due to improper use, please read and observe the following items before use:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high-volume level for extended time to avoid product malfunction.
2. If there is any abnormality during use (e.g., smoke, strange odor), please kill the power switch and unplug from power source, then send the product to the local after-sales service for repair.
3. When using replaceable batteries, do not use batteries with damaged insulation on the casing. Do not attempt to charge non-rechargeable batteries.
4. Keep this product and its accessories in a dry and ventilated area. Do not store in a humid or dusty area for extended time. Keep away from fire, rain, liquid intrusion, bumping, throwing, vibrating, or from blocking any ventilation openings, to prevent malfunction.
5. The product must, when installed on walls or ceilings, be fixed firmly in place at adequate strength to prevent from falling.
6. Please abide by safety rules during operation. Do not use the product in places prohibited by laws or regulations to avoid accident.
7. Do not disassemble or repair the product by yourself to avoid injury. If you have any questions or require any services, please contact our local after-sales service.

### ■ Label Meanings

 This symbol indicates that this product should not be disposed of with your household waste, according to the WEEE directive (2012/19/EU) and your national law. This product should be handed over to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with WEEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, or your household waste disposal service.

※The product specification is subject to change without prior notice.