

尊敬的用户：

感谢您选购得胜E270扩音器，为了您能够更好的了解使用本产品，建议您在使用前仔细阅读本说明书。

若存在有疑问或者您有宝贵的建议，可通过拨打得胜官方服务热线400 6828 333或使用微信扫描二维码关注得胜官方公众号与我们联系。



产品特性

- 集麦克风、功放、音箱、电池于一体的便携式数字播放扩音器
- 选用稀土材质扬声器，重量更轻、音质更好、声音更大
- 综合应用数字电声技术，能输出高达12W的峰值功率
- 特殊的技术结构设计，具备防雨防尘功能，方便户外使用
- 壳体采用ABS工程原料成型，坚固耐磨，硅胶按键设计，手感更佳
- 具有音乐播放功能，支持TF存储卡上的多媒体音频文件播放
- 具有蓝牙功能，可连接手机、电脑、PAD等蓝牙设备播放音乐
- 内置大容量持久型锂离子电池，充电只需4小时，使用时间可达10小时以上
- 灵活可变的肩挎及腰挂等多种佩戴方式，满足不同用户的个性需求

标准配置

扩音器	1个	腰带	1条
头戴麦克风	1个	肩带	1条
充电线	1条	说明书	1份
背扣	1个		

适用场合

 
教学、导游、培训、促销、宣传、晨练、娱乐等场合

技术参数

- 频率响应：80Hz-12KHz
- 峰值功率：12W
- 扬声器阻抗：4Ω
- 工作电压：3.7V
- 电池规格：3.7V/2000mAh 锂离子电池
- 充电器规格：DC 5V≐900mA
- 充电时间：约4小时
- 使用时间：≥10小时
- TF卡：支持64G及以下
- 媒体格式：MP3、WAV、WMA
- 单机重量：247g
- 产品规格：94x101x45mm

注：以上数据由得胜实验室测试得到，并拥有最终解释权！


控制面板功能示意图

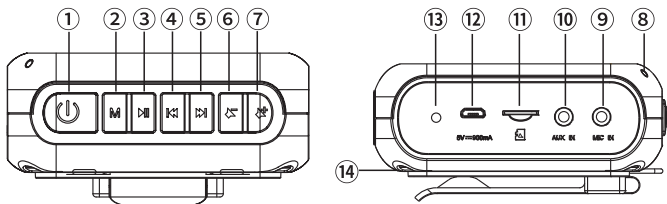

- ① 电源开关键：长按此键约3秒后电源指示灯亮，进入开机工作状态，在工作模式下长按此键约3秒，电源指示灯灭，进入关机状态
- ② M（模式）键：模式切换键，可切换蓝牙、TF卡和音频输入三个模式
- ③ 播放/暂停 ：控制TF卡或蓝牙音乐播放或暂停
- ④ 上一曲按键 ：蓝牙、TF卡播放时，短按此键为上一曲，长按此键可减小音乐音量
- ⑤ 下一曲按键 ：蓝牙、TF卡播放时，短按此键为下一曲，长按此键可增加音乐音量
- ⑥ 总音量减键：调节音乐和麦克风总音量减小
- ⑦ 总音量加键：调节音乐和麦克风总音量加大
- ⑧ 工作指示灯：开机常亮绿灯，播放音乐时绿灯慢闪，低电时红灯慢闪
- ⑨ MIC IN 输入插孔：将头戴麦克风插头插入此孔，自动进入喊话模式
- ⑩ AUX IN 输入插孔：用Ø3.5mm连接线，将DVD、Mp3等音乐信号导入本扩音器中，机器自动切换为音频输入播放模式，作为有源音箱使用
- ⑪ TF卡插口：根据示意的插卡方向插入TF内存卡，插入时，听到“嗒”一声，表示已安装到位并将其锁住；取卡时只要将卡往下按，听到“嗒”一声后轻轻松手，TF内存卡会自动弹出来
注意：若TF卡内有其它非音频类文件可能会导致机器不能正常读取TF卡内歌曲，拷入歌曲时请先格式化
- ⑫ DC充电插孔：将Micro USB连接线一端插入此孔，另一端接5V≐900mA的USB适配器或电脑USB孔给扩音器充电

- ⑬ 充电指示灯：充电时常亮红灯，充满时常亮绿灯
- ⑭ 肩挂扣

 腰带配戴示意图

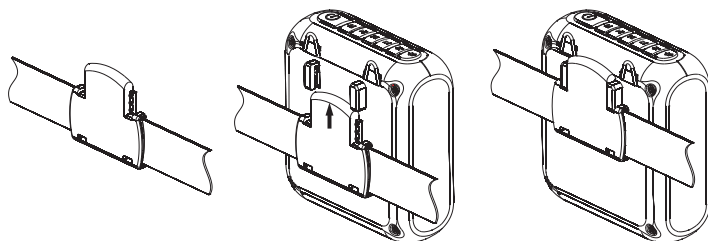

将腰带放入背扣的滑动槽内 对准扩音器背扣卡位向上推入 完成背扣安装

使用说明

1. 长按电源键约3秒开机，机器语音提示进入蓝牙模式，此时即可配对蓝牙设备播放音乐，调节音量加减键至声音为合适大小；
2. 插入TF卡，机器自动语音提示切换为TF卡模式，此时即可播放TF卡上的音乐；
3. 从AUX IN插入3.5mm音频源线，机器自动提示为外接音频输入模式，此时机器只做有源音箱用；
4. 从MIC IN处插入机器所搭配的头戴麦克风，即可进入喊话模式，请调节音量至合适大小，可有效避免啸叫现象；
5. 使用过程中，若听到低电提示音或看到红灯闪时表示电量低，请及时充电；
6. 本机设有完善的保护功能，当声音失真过大或电池电压过低时，产品会自动进入保护状态以防止产品损坏，这时可通过给产品充电来恢复正常使用。

安全警示

为避免电击、过高温度、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失，使用本产品，请仔细阅读并遵守以下事项：

1. 使用产品时请确认所连接设备与本产品功率是否匹配以及合理调整音量大小，不要在超过产品功率及大音量下长时间使用，以免造成产品异常和耳朵听力损伤；
2. 使用中若发现有异常（如冒烟、异味等），请立即关闭电源开关并拔掉电源插头，然后将产品送经销商检修；
3. 本产品及配件都应放置在室内干燥通风处，勿长期存放在潮湿、灰尘多的环境，使用中避免靠近裸露火源、碰到液体物质、雨淋、产品进水、过度碰撞、抛掷、振动本机及覆盖通风孔，以免损坏其功能；
4. 若产品需要固定于墙壁或天花板上时，请确保固定到位，防止因固定强度不足导致产品发生跌落危险；
5. 使用该产品时需遵守相关安全规定，法律法规明确禁止使用场合请勿使用本产品，以免导致意外事故；
6. 请不要自行拆机改装或维修，以防止出现人身伤害，如有问题或服务需求请联系当地售后服务网点跟进处理。

注意事项：

1. 本单为保修凭证，请用户妥善保管，如有遗失，恕不保修或退换。
2. 保修期限：购买之日起十二个月内。
3. 除了不可抗力事件损坏外，由本公司负责，免费维修。
4. 如属保管不善或使用不当造成的损坏，维修点将酌情收费。
5. 擅自拆卸维修者，不予保修。
6. 以上保修条款仅限于中国市场适用（不包含港澳台地区）。

产品服务保证书

姓名：_____ 电话：_____ 地址：_____

商品：_____ 型号：_____ 购买日期：_____年____月____日

维修记录栏(由维修员填写)	维修员签名	日期

◆ 广东得胜电子有限公司 ◆ 电话：400-6828-333 ◆ 地址：广东省惠州市博罗县龙溪街道富康一路2号

※ 本产品相关规格如有变更恕不另行通知。 CMIIT ID: 2019DP5641 中国制造



Dear User:

Thank you for purchasing TAKSTAR E270 Voice Amplifier. Please read the user manual before operation and keep it for reference in future.

■ Features

- A portable digital amplifier combining microphone, power amplifier, speaker and battery
- Rare earth material speaker features light weight, excellent sound quality and loud output volume
- Integrated digital electro-acoustic technology, 12W peak output power
- Special anti-rain and dust structure for convenient outdoor use
- Solid and durable ABS enclosure, silicone button for comfortable operation
- Music play function supports multimedia audio file play of TF card
- Designed with bluetooth function for playing the music of cell phone, PC, PAD
- Built-in high capacity lithium-ion battery, 4hrs fast recharging time and long operating time up to 10hrs
- Shoulder hanging or waist wearing style for flexible use
- Ergonomic design and fashionable contour

■ Standard Configuration

Amplifier	1pc	Waist strap.....	1pc
Headworn Microphone.....	1pc	Shoulder Strap.....	1pc
Recharging Cable	1pc	User Manual	1pc
Belt clip	1pc		

■ Application

 
Teaching, tour guiding, training, promotion, propaganda, morning exercise, entertainment

■ Specification

- Frequency Response: 80Hz-12KHz
- Peak Power: 12W
- Speaker Impedance: 4Ω
- Operating Voltage: 3.7V
- Battery: 1pc 3.7V/2000mAh lithium-ion battery
- Charger: DC 5V \approx 900mA
- Recharging Time: approx. 4hours
- Operating Time: \geq 10hours
- TF Card: max. 64G
- Media Format: MP3, WAV, WMA
- Unit Weight: 247g
- Product Dimension: 94x101x45mm


Note: The data is tested by Takstar Laboratory, and Takstar has the final interpretation right!

■ Function Illustration

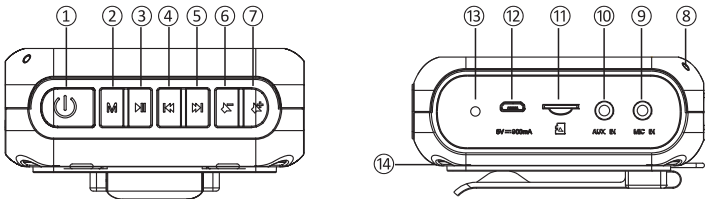

- ① Power button: long press it for 3 seconds, the power indicator lights up, the amplifier is now switched on and in the working status, keep pressing it for 3 seconds for power off
- ② M(mode) button: for bluetooth/TF card/audio input mode switch
- ③ Play/Pause: press this button to control the TF card and bluetooth music's play and pause
- ④ Previous song button: short press for previous song when playing bluetooth/TF card music, long press for music volume reduction
- ⑤ Next song button: short press for next song when playing bluetooth/TF card music, long press for music volume increase
- ⑥ Volume -: decreases the music and microphone master volume
- ⑦ Volume +: increases the music and microphone master volume
- ⑧ Working indicator: it will light green when the amplifier is power-on, the green light glitters slowly when playing music, if the battery is low, it will glitter red slowly
- ⑨ MIC IN socket: insert the microphone plug into this socket for speaking
- ⑩ AUX IN socket: plug signal such as DVD, MP3 into the AUX IN socket with a \varnothing 3.5mm audio cable, the amplifier will be used as a speaker
- ⑪ TF card port: insert the TF card according to the direction of the illustration, when you hear the sound "Da" after you insert it, it means the card is fixed, when you want to take out the card, just press it and the card will come out automatically with a sound "Da" Warning: if it has non-audio file in the TF card may lead to the amplifier can not read the music well, please format the TF card before copying songs
- ⑫ DC recharging port: connect this port and 5V \approx 900mA USB power adapter or PC with a micro USB cable to recharge the amplifier
- ⑬ Recharging indicator: it lights up red during recharging process, and green after recharging fully.
- ⑭ Shoulder strap buckle

 ■ Waist Strap Wearing Diagram

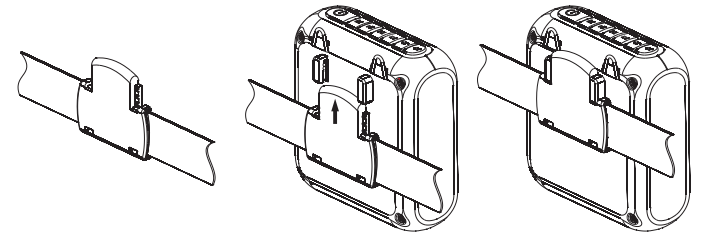

Put the waist strap into the buckle slot Insert the belt clip upward Finish the installation

■ Operation Instruction

1. Long press the power button for 3 seconds to turn on the amplifier, the voice prompts it enters into bluetooth mode, user can match with bluetooth equipment to play music, and adjust volume+/- buttons for proper volume.
2. Insert TF card and the voice prompts it enters into TF card mode, then user can play the music in TF card.
3. Insert 3.5mm audio cable to AUX IN socket, and the voice prompts external audio input mode, the amplifier will be used as active speaker.
4. Plug in headworn microphone into MIC IN socket to enter into speaking mode, adjust to proper volume to avoid feedback.
5. During using, if you hear low voltage prompt or glitter red, it means the battery is low, please recharge in time.
6. This product has perfect protection function. When the distortion is too high or the battery power is too low, it enters into protection status to avoid the product destroyed. At this time, user needs to recharge the product to return to normal operation.

■ Safety Instructions

To avoid electric shock, overheat, fire, radiation, explosion, mechanical risk and injury or property loss due to improper use, please read and observe the following items before use:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high-volume level for extended time to avoid product malfunction.
2. If there is any abnormality during use (e.g., smoke, strange odor), please kill the power switch and unplug from power source, then send the product to the local after-sales service for repair.
3. Keep this product and its accessories in a dry and ventilated area. Do not store in a humid or dusty area for extended time. Keep away from fire, rain, liquid intrusion, bumping, throwing, vibrating, or from blocking any ventilation openings, to prevent malfunction.
4. The product must, when installed on walls or ceilings, be fixed firmly in place at adequate strength to prevent from falling.
5. Please abide by safety rules during operation. Do not use the product in places prohibited by laws or regulations to avoid accident.
6. Do not disassemble or repair the product by yourself to avoid injury. If you have any questions or require any services, please contact our local after-sales service.

产品中有毒有害物质或元素的名称及含量标识表

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料部件	○	○	○	○	○	○
金属部件	×	○	○	○	○	○
电路板组件	×	○	○	○	○	○
线缆	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
 此标志为产品的环保使用期限标志,
 且此环保使用期限只适用于产品正常工作的温度和湿度等条件。

※ The product specification is subject to change without prior notice. CMIIT ID: 2019DP5641 Made in China