

尊敬的用户：

感谢您选购TAKSTAR E5M便携式数字扩音器，为了您能够更好的了解使用本产品，建议您在使用前仔细阅读本说明书。


若存在有疑问或者您有宝贵的建议，可通过拨打得胜官方服务热线 400 6828 333 或使用微信扫描二维码关注得胜官方公众号与我们联系。



产品特性

- 集麦克风、播放器、功放、音箱于一体的便携式数字扩音器
- 选用稀土材质扬声器，重量更轻、音质更好、声音更大
- 采用Class D 数字功放模块，低功耗高效率，能输出高达8W的峰值功率
- 具有音乐播放功能，支持TF存储卡上的多媒体音频文件播放
- 具有蓝牙功能，可连接手机、电脑、PAD等蓝牙设备播放音乐
- 内置大容量耐久型锂离子电池，充电约4小时，使用时间可达20小时以上
- 灵活可变的肩挎及腰挂佩戴方式，满足不同用户的个性需求
- 产品符合人体工学原理设计，造型新颖，外观时尚，使用舒适

控制面板功能示意图

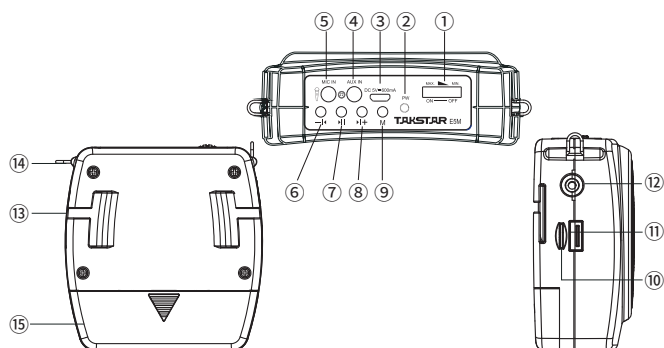

- ① 电源开关：向左旋转此开关开机，往MAX方向旋转音量增大，往MIN方向旋转音量减小至无声
- ② PW电源指示灯：正常开机后，此灯亮绿色，当电量不足时此灯亮红色
- ③ 充电输入插孔：将USB充电线插入此孔，另一端连接通用的USB输出充电器（如手机充电器、电脑USB接口等），即可对电池进行充电
- ④ AUX IN 输入插孔：用 Ø3.5mm 三极连接线，将DVD、MP3等音乐信号导入本扩音器中可做有源音箱
- ⑤ MIC IN 输入插孔：将头戴式麦克风插头插入此孔，进入扩音工作状态
- ⑥ 上一曲按键◀：短按此键为上一曲，长按此键可以减小音乐音量
- ⑦ 播放/暂停按键▶||：按此键可以控制音乐的播放与暂停
- ⑧ 下一曲按键▶+：短按此键为下一曲，长按此键可以增大音乐音量
- ⑨ M (模式) 键：模式切换键，可切换蓝牙、USB/TF卡和音频输入三个模式
- ⑩ TF 内存卡插口：根据示意的插卡方向插入TF 内存卡，插入时，听到“嗒”一声，表示已安装到位并将其锁住；取卡时只要将卡往下按，听到“嗒”一声，TF 内存卡会自动弹出来
- ⑪ USB插孔：可支持大容量U盘
- ⑫ 耳机输出插孔：将耳机插头插入此孔，进入耳机听音状态（自动关闭喇叭输出）
- ⑬ 腰挂扣
- ⑭ 肩挂扣
- ⑮ 电池仓：内置一节18650大容量锂离子电池

使用说明

1. 将电池按正确的标示装入电池仓内
2. 将头戴麦克风正确的佩戴在头部，并调整好麦克风的拾音角度
3. 将Ø3.5mm的麦克风插头插入麦克风输入孔内
4. 打开电源，电源指示灯亮，调整音量按键到合适的音量大小
5. 使用过程中，若电量指示灯亮红色时，表示电池电量低，请及时充电

注意事项

为避免电击、过高温度、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失，使用本产品，请仔细阅读并遵守以下事项：

1. 使用产品时请确认所连接设备与本产品功率是否匹配以及合理调整音量大小，不要在超过产品功率及大音量下长时间使用，以免造成产品异常和耳朵听力损伤；
2. 使用中若发现有异常（如冒烟、异味等），请立即关闭电源开关并拔掉电源插头，然后将产品送经销商检修；
3. 若产品需要使用可拆装电池时，严禁使用外壳绝缘材料破损的电池；请不要为可充电电池充电；
4. 废弃电池需放入指定的分类垃圾桶，不可作为儿童玩具或直接丢弃，以免造成安全隐患或影响环境；
5. 更换错误型号的电池会有爆炸危险，务必按照说明处理废弃的电池；
6. 禁止将电池拆解、撞击或投入火中，若出现严重膨胀，请勿继续使用；请勿置于高温环境中；浸水后请勿继续使用；
7. 本产品及配件都应放置在室内干燥通风处，勿长期存放在潮湿、灰尘多的环境，使用中避免靠近裸露火源、碰到液体物质、雨淋、产品进水、过度碰撞、抛掷、振动本机及覆盖通风孔，以免损坏其功能；
8. 若产品需要固定于墙壁或天花板上时，请确保固定到位，防止因固定强度不足导致产品发生跌落危险；
9. 使用该产品时需遵守相关安全规定，法律法规明确禁止使用场合请勿使用本机，以免导致意外事故；
10. 请不要自行拆机改装或维修，以防止出现人身伤害，如有问题或服务需求请联系当地经销商跟进处理；
11. 本产品适用的海拔及气候条件由选用的充电适配器决定。

技术参数

- 频率响应：80Hz-12KHz
- 峰值功率：8W
- 扬声器阻抗：6Ω
- 工作电压：DC 3.5-4.2V
- 电池规格：3.7V/18650锂离子电池
- 充电电压：DC 5V/600mA
- 充电时间：≈4小时
- 使用时间：≥20小时
- 媒体播放：U盘/TF卡，支持64G及以下
- 媒体格式：MP3、WAV
- 单机重量：248g
- 产品规格：98x95x46mm

标准配置



适用场合

- 适用于教学、导游、培训、促销、宣传、晨练、娱乐等场合扩音




Dear User:

Thank you for purchasing TAKSTAR E5M Digital Amplifier. Please read the user manual before operation and keep it for reference in future.

Features

- The digital amplifier combining microphone, amplifier, power amplifier, speaker cabinet together
- Rare earth material speaker features light weight excellent sound quality and loud output volume
- Class D digital amplification module for low power consumption and high output power up to 8W
- Music play function supports multimedia audio file play of TF card
- Designed with bluetooth function for playing the music of cell phone, PC, PAD
- Built-in high capacity Li-ion battery, 4 hours recharging time and play time is up to 20 hours
- Multiple wearing choices, shoulder hanging and waist wearing for convenient use
- Ergonomic design with unique and fashionable outlook

Function Illustration

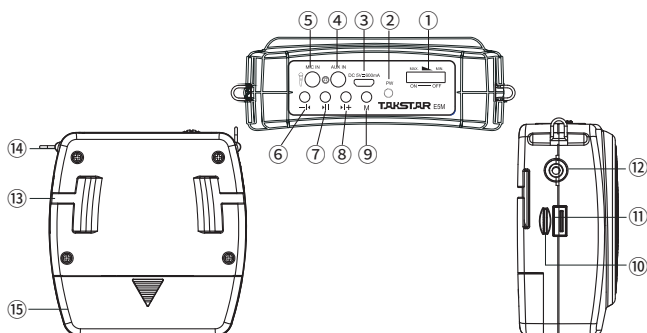

- ① Power switch: rotate to left to switch on. Rotate to MAX for increasing volume, and MIN for decreasing volume until power off.
- ② Power LED: turn on the amplifier and the LED lights up green. The LED lights up red means low power.
- ③ Power adaptor input socket: connect the USB charging cable with this connector, and the other end with USB output charger (charger or cell phone, PC USB interface) to charge the battery.
- ④ AUX IN input socket: use the supplied Ø3.5mm (3 conductor connector) cable to connect the music signal such as DVD, MP3 with the amplifier. The amplifier can be used as active speaker cabinet.
- ⑤ MIC IN connector: insert the headset plug into this connector for amplifying status.
- ⑥ ◀: press shortly for previous song. Keep pressing for decreasing the volume.
- ⑦ ||: play / pause the music.
- ⑧ ▶: press shortly for next song. Keep pressing for increasing the volume.
- ⑨ M (mode) button: the mode switching button to switch Bluetooth, USB/TF card or audio input mode.
- ⑩ TF card socket: insert the TF card according to the indicated direction. When you hear "da" means the card is fixed, just press it and then the card will come out automatically.
- ⑪ USB interface: it supports high capacity USB stick.
- ⑫ Headphone output socket: insert the headset plug into this socket for listening the audio (it automatically closes the speaker output).
- ⑬ Strap buckle;
- ⑭ Shoulder strap buckle;
- ⑮ Battery compartment: it loads a 18650 high capacity Li-ion battery.

Instructions for use

1. Put the battery into the battery compartment according to the polar
2. Wear the headworn microphone correctly and then adjust the pick-up angle for microphone
3. Insert the Ø3.5mm microphone plug into the microphone input socket
4. The power indicator will be light when turn on the power, adjust the volume you need
5. If the power indicator turn red, it means low power, please recharge in time

Operation & Caution

To avoid personal injury or property loss caused by electric shock, over temperature, fire, radiation, explosion, mechanical risk and improper use, please read carefully and abide by the following items before operation:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high volume level for a long time to avoid abnormal functioning or hearing loss.
2. If abnormal phenomenon (smoke, abnormal smell) happens, please turn off the power switch and disconnect the power plug with power socket, and send the product to local dealer for maintenance.
3. Using battery with broken insulation material is forbidden. Please do not charge the non-rechargeable battery.
4. Put the waste battery into classified dustbin rather than used as toy by children or discarded directly to avoid potential danger or affecting the environment.
5. Use the wrong type of battery for replacement leads to explosion. Please dispose the waste battery according to instruction.
6. It is forbidden to disassemble or collide the battery or put it into fire. If the battery expands seriously, stop using it. Please do not put the battery in high temperature environment. Stop using it after being soaked in water.
7. The product and accessories should be put in dry and ventilated place rather than humid or dusty environment. Prevent the product from fire, liquid, rain, water, over-colliding, throwing, vibrating, vent hole covered to avoid function damage.
8. When the product needs to be installed on wall or ceiling, please fix it tightly to avoid dropping risk.
9. Please abide by safety rules during operation. Do not use the product in the place prohibited by regulation or law to avoid accident.
10. Do not disassemble or repair the product by yourself to avoid personal injury. If you have question or need service, please contact the local dealer.
11. The applicable altitude and climate condition of this product is subject to charging adapter.

Specification

- Frequency Response: 80Hz-12KHz
- Peak Power: 8W
- Speaker Impedance: 6Ω
- Operating Voltage: DC 3.5-4.2V
- Battery Specification: 3.7V/18650 Li-ion battery
- Recharging Voltage: DC5V/600mA
- Recharging Time: ≈4hours
- Operating Time: ≥20hours
- Media Playing: USB stick/TF card, max. 64G
- Media Format: MP3, WAV
- Net Weight: 248g
- Product Specification: 98x95x46mm

Product Content



Application

- Teaching, tour guide, selling, promotion, outdoor PA