

TAKSTAR® 得胜



演讲麦 JD8

Speech Microphone

使用手册 | User Manual

■ 前言

尊敬的用户：

感谢您选购得胜JD8演讲麦，为了您能够更好地了解使用本产品，建议您在使用前仔细阅读本说明书。

若存在有疑问或者您有宝贵的建议，可通过拨打得胜官方服务热线400 6828 333或微信扫描二维码关注得胜官方公众号与我们联系。



■ 产品特性

- 手持式扩音器，适用于演讲、导游、宣传、K歌娱乐等场合；
- 采用金属外壳、音质好、声音大、峰值功率15W；
- 具有音量调节功能，可根据使用的场合情况调整扩音音量；
- 内置DSP啸叫抑制芯片，有效抑制啸叫声；
- 多种工作模式一键快速切换，操作更简单方便；
- 支持TF卡播放多媒体音频文件及录音功能；
- 超长待机，节能省电，停止使用15分钟后自动关机；
- 内置大容量锂电池，节能环保，使用时间约8小时；
- 人体工学设计，轻便握感舒适，适合长时间手持扩音演讲。

■ 适用范围

适用于演讲、导游、宣传、K歌等场合

■ 标准配置

JD8 演讲麦.....	1个
防风棉.....	1个
Type-C充电线.....	1条
说明书.....	1份

■ 技术参数

主机参数


- 频率响应: 150Hz-12kHz
- 峰值功率: 15W
- 扬声器阻抗: 4Ω
- 总谐波失真: THD≤5% 1kHz@4R, 4W
- 信噪比: 80dB (A-Weighted) @1W 4Ω
- 主芯片: DSP
- 无线连接版本: 5.3
- 混响模式: Reverb
- 工作电压: 3.3V-4.2V
- 电池类型: 锂离子电池 (18650)
- 电池容量: 3.6V/3200mAh
- 充电方式: DC 5V/2A
- 充电时间: 约2.5小时
- 使用时间: 约8小时
- 产品重量: 约290g
- 产品尺寸: Φ68mm*256mm (直径*高)

音头参数

- 拾音器: 背极式驻极体
- 指向性: 单指向
- 频率响应: 60Hz-16kHz
- 灵敏度: -40±2dB (0dB=1V/Pa, at 1kHz)

注: 以上数据由得胜实验室测试得到,并拥有最终解释权!

■ 功能示意

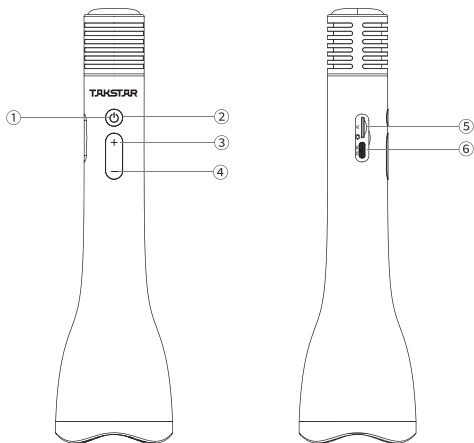

① 电源键：长按电源键2秒开机或关机。

-开机状态下，循环点按电源键切换5种工作模式：演讲模式、主持模式、K歌模式、无线播放模式、TF卡模式（插入TF卡状态下），切换时有语音提示，出厂默认演讲模式，双击快速返回演讲模式。

-在插有TF卡的情况下，同时按下“电源键”和音量“+”键可进入录音模式，并语音提示“录音模式”，录制完成后点按“电源键”结束录音，将自动播放录音内容；同时按下“电源键”和音量“-”键，可开启或关闭单曲循环播放。


-任意工作模式下，无使用15分钟后将自动关机。

- ② 指示灯: 电量充足时, 指示灯常亮绿灯; 低电状态下红灯常亮; 充电时红灯闪烁, 充满电后绿灯常亮。
- ③ 音量“+”键: 点按增加音量, 共5级音量调节, 最大音量有“嘟”一声提示音。TF卡、无线播放模式下, 长按此键可切换为上一曲。
- ④ 音量“-”键: 点按减小音量, 共5级音量调节, 最小音量有“嘟”一声提示音。TF卡、无线播放模式下, 长按此键可切换为下一曲。
- ⑤ TF卡接口: 将存有MP3、WAV格式音频文件的TF卡插入此接口进行播放。
- ⑥ 充电接口: 通过连接Type-C充电线为演讲咪充电。

提示: 初次使用时, 建议先充满电; 当电池充满时, 请停止对电池充电, 避免电池过充; 如长时间不用, 需每半年充电一次, 避免电池过放, 对电池性能产生影响。

■ 使用说明

一、握持示意图

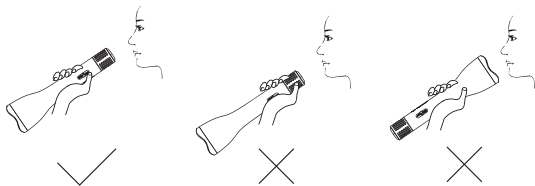

二、无线播放配对

首次使用本机时, 需要与手机或无线播放设备配对连接, 步骤如下:

1. 开机状态下, 点按演讲麦电源键切换至无线播放模式;

2. 进入手机的“设置”菜单，开启手机的无线播放功能，搜索“TAKSTAR JD8”进行连接，连接成功后伴有提示音。
 3. 下次开机后切换至无线播放模式时，如果是已进行过无线连接，将自动回连最后一次使用的播放设备。
 4. 在无线播放连接成功的情况下，切换到其他工作模式则自动断开播放。
- 注：在无线播放状态下，麦克风处于关闭状态，不具备拾音功能。

■ 安全警示

为避免电击、高温、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失，使用本产品前，请仔细阅读并遵守以下事项：

1. 使用产品时请确认所连设备与本产品是否匹配以及合理调整音量大小，不要在超过产品功率及大音量下长时间使用，以免造成产品异常；
2. 使用中若发现有异常（如冒烟、异味等），请立即关闭电源开关并拔掉电源插头，然后将产品送售后服务网点检修；
3. 消费者若使用电源适配器供电，则应购买配套使用获得CCC认证并满足标准要求电源适配器；
4. 本产品及配件都应放置在室内干燥通风处，请勿长期存放在潮湿、灰尘多的环境，使用中避免靠近火源、雨淋、进水、过度碰撞、抛掷、振动本机及覆盖通风孔，以免损坏其功能；
5. 若产品需要固定于墙壁或天花板时，请确保固定到位，防止因固定强度不足导致产品发生跌落危险；
6. 使用该产品时需遵守相关安全规定，法律法规明确禁止使用场合请勿使用本产品，以免导致意外事故；
7. 请不要自行拆机改装或维修，以防止出现人身伤害，如有问题或服务需求请联系当地售后服务网点跟进处理。

■ 环保说明

产品中有毒有害物质或元素的名称及含量标识表

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料部件	○	○	○	○	○	○
金属部件	×	○	○	○	○	○
电路板组件	×	○	○	○	○	○
线缆	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。

此标志为产品的环保使用期限标志，
且此标保使用期限只适用于产品正常工作的温度和湿度等条件。



■ 关于图标含义解释



此符号表示，根据WEEE指令(2012/19/EU)和国家法律，由于这种类型的废弃物会有潜在的有害物质，可能对环境 and 人类健康产生负面影响，所以本产品不应与您的家庭垃圾一起处置，应将本产品交由授权的电气和电子设备（WEEE）回收站回收。同时，您在正确处理本产品的同时将有助于自然资源的有效利用。如需了解更多有关您可以在何处放置废物回收设备的信息，请联系您当地的城市办事处、废物管理局或家庭废物处理服务部门。

■ 关于本说明书

本说明书中内容符合截止印刷之日的技术规格。由于得胜公司会不断改进产品，本说明书可能不符合您的特定产品的技术规格。要获取最新版说明书，请访问得胜官网，然后下载说明书文件。技术规格、设备或另售的附件在各个地区可能有所不同，如有问题请与当地得胜销售网点确认。如需更多支持和深层产品信息，请浏览得胜官方网站：<https://www.takstar.com>

版权所有 ©2024 得胜。得胜、TAKSTAR及其各自标志是广东得胜电子有限公司在中国和/或其他国家/地区的注册商标或商标。所有其它商标均是其各自所有者的财产。

■ Preface

Dear Customer,

Thanks for purchasing our product. Read this manual thoroughly to use the product properly.

If you have any questions or suggestions, please contact our local sales service.

■ Features

- Handheld amplifier suitable for speeches, tour guiding, promotions, karaoke, and entertainment.
- Durable metal casing, excellent sound quality and high volume with 15W peak power.
- Volume adjustment feature allows quick control based on your usage scenario.
- Integrated DSP feedback suppression chip effectively minimizes feedback noise.
- Multiple operational modes with one-key switching for user-friendly operation.
- Supports TF card playback of multimedia audio files and recording functionality.
- Extended standby time with auto power-off function after 15 minutes of inactivity.
- Built-in high-capacity lithium-ion battery provides about 8 hours of usage time.
- Ergonomic design for a lightweight, comfortable grip, perfect for extended use.

JD8 Speech Microphone

■ Applications

Suitable for speeches, tour guiding, promotions, karaoke, and similar events.

■ Package Contents

1 × JD8 Speech Microphone

1 × Windscreen

1 × Type-C Charging Cable

1 × User Manual

■ Specifications

Main Unit


- Frequency Response: 150Hz-12kHz
- Peak Power: 15W
- Speaker Impedance: 4Ω
- THD: $\leq 5\%$ @ 1kHz, 4R, 4W
- SNR: 80dB (A-Weighted) @ 1W, 4Ω
- Main Chip: DSP
- Wireless Connectivity: V5.3
- Reverb Mode: Reverb
- Operating Voltage: 3.3V-4.2V
- Battery Type: Lithium-ion (18650)
- Battery Capacity: 3.6V/3200mAh
- Charging Method: DC 5V/2A
- Charging Time: Approx. 2.5hours
- Usage Time: Approx. 8 hours
- Product Weight: Approx. 290g
- Product Size: $\varnothing 68\text{mm} \times 256\text{mm}$ (Dia. \times H)

Capsule

- Type: Back electret condenser
- Polar Pattern: Unidirectional
- Frequency Response: 60Hz-16kHz
- Sensitivity: $-40 \pm 2\text{dB}$ (0dB=1V/Pa, at 1kHz)

Note: The above data are measured by Takstar laboratory which has the final interpretation rights!

■ Function Descriptions

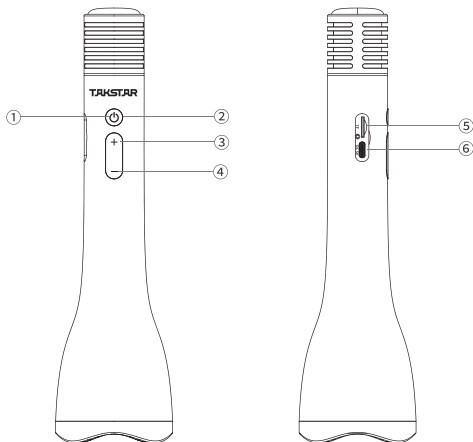

① Power Button: Press and hold the power button for 2 seconds to turn the device on or off.

-In the powered-on state, press the power button repeatedly to cycle through 5 working modes: Speech Mode, Host Mode, Karaoke Mode, Wireless Playback Mode, and TF Card Mode (when a TF card is inserted). Voice prompts will guide you through the mode changes, with Speech Mode set as the default. Double-click to quickly return to Host Mode.

JD8 Speech Microphone

-When a TF card is inserted, press both the power button and volume + button to enter recording mode, with a voice prompt stating Recording Mode. Press the power button again to end recording and auto play recorded content. Long press both the power button and the volume - button to enable or disable single-track loop playback.


-The device will automatically power off after 15 minutes of inactivity in any mode.

- ② Indicator Light: Green light indicates sufficient battery; red light indicates low battery. During charging, the red light flashes; when fully charged, the green light remains on.
- ③ Volume “+” Button: Press to increase the volume with a total of 5 levels. The maximum volume will trigger a beep sound. In TF Card and Wireless Playback modes, press and hold to skip to the previous track.
- ④ Volume “-” Button: Press to decrease the volume with a total of 5 levels. The minimum volume will trigger a beep sound. In TF Card and Wireless Playback modes, press and hold to skip to the next track.
- ⑤ TF Card Slot: Insert a TF card containing MP3 or WAV audio files for playback.
- ⑥ Charging Port: Connect the Type-C charging cable to charge the speech microphone.

Note: Fully charge before first use. Disconnect charger when fully charged. Recharge every 6 months for optimal battery performance.

■ Operating Instructions

I. Holding Diagram

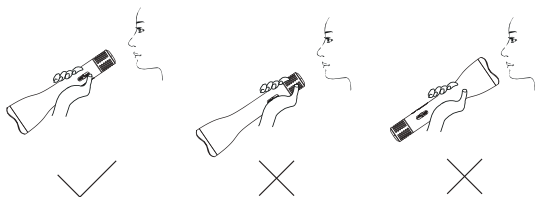

II. Wireless Playback Pairing

To pair the device with a mobile phone or wireless playback device for the first time, follow these steps:

1. In power-on state, press the power button to switch to Wireless Playback Mode.
2. Go to your phone “Settings” menu, enable wireless playback, and search for “TAKSTAR JD8” to connect. A prompt sound will indicate successful connection.

JD8 Speech Microphone

3. On subsequent power-ups, when switched to Wireless Playback Mode, the device will automatically reconnect to the last used playback device.
4. When connected successfully in Wireless Playback Mode, switching to other modes will automatically disconnect the playback.

Note: In Wireless Playback Mode, the microphone part is turned off and does not function as a pickup device.

■ Safety Instructions

To avoid electric shock, overheat, fire, radiation, explosion, mechanical risk and injury or property loss due to improper use, please read and observe the following items before use:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high-volume level for extended time to avoid product malfunction.
2. If there is any abnormality during use (e.g., smoke, strange odor), please kill the power switch and unplug from power source, then send the product to the local after-sales service for repair.
3. Power adapter used, if any, should be approved by CCC certification or similar standards and comply with the power supply requirements.
4. Keep this product and its accessories in a dry and ventilated area. Do not store in a humid or dusty area for extended time. Keep away from fire, rain, liquid intrusion, bumping, throwing, vibrating, or from blocking any ventilation openings, to prevent malfunction.

5. The product must, when installed on walls or ceilings, be fixed firmly in place at adequate strength to prevent from falling.
 6. Please abide by safety rules during operation. Do not use the product in places prohibited by laws or regulations to avoid accident.
 7. Do not disassemble or repair the product by yourself to avoid injury.
- If you have any questions or require any services, please contact our local after-sales service.

■ Label Meanings



This symbol indicates that this product should not be disposed of with your household waste, according to the WEEE directive (2012/19/EU) and your national law. This product should be handed over to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with WEEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective use of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, or your household waste disposal service.

■ About This Manual

This manual contains up-to-date technical specifications as of printing. However, specifications contained herein may not conform to your particular product since Takstar is constantly improving its products. Also, specifications, devices or accessories available may vary from region to region. If you have any questions, please contact our local sales outlet. For the latest version/more information, please visit our website: <https://www.takstar.com/>

Copyright ©2024 TAKSTAR. TAKSTAR, 得胜 and their respective logos are registered trademarks or trademarks of Guangdong Takstar Electronic Co., Ltd. in the PRC, and/or other countries. All other trademarks are the property of their respective owners.

注意事项:

1. 本单为保修凭证, 请用户妥善保管, 如有遗失, 恕不保修或退换。
2. 保修期限制: 购买之日起十二个月内。
3. 除了不可抗力事件损坏外, 由本公司负责, 免费维修。
4. 如属保管不善或使用不当造成的损坏, 维修点将酌情收费。
5. 擅自拆卸维修者, 不予保修。
6. 以上保修条款仅限于中国市场适用 (不含港澳台地区)。

产品服务保证书

姓名: _____ 电话: _____ 地址: _____

商品: _____ 型号: _____ 购买日期: _____ 年 _____ 月 _____ 日

维修记录栏 (由维修员填写)	维修员签名	日期

◆ 广东得胜电子有限公司 ◆ 电话: 400-6828-333 ◆ 地址: 广东省惠州市博罗县龙溪街道富康一路2号



扫一扫,了解更多产品
Scan for more
product information

广东省电声工程技术研究开发中心 广东得胜电子有限公司制造

地址: 广东省惠州市博罗县龙溪街道富康一路2号

服务热线:400 6828 333 传真:0752 6383950

邮箱:xs@takstar.com

网址:www.takstar.com

Designed & Manufactured by:

Guangdong Takstar Electronic Co., Ltd.

Address: No.2 Fu Kang Yi Rd., Longxi Boluo
Huizhou, Guangdong 516121 China

Tel: 86 752 6383644 Fax: 86 752 6383952

Email: sales@takstar.com

Website: www.takstar.com